

Report No.: BT20200625T

TL-787

Page 1 of 9

**Customer Information:**

Customer. . . . . : UNIVERSAL CERTIFICATION and SURVEILLANCE  
SERVICES Trade Co.  
Address. . . . . : /

**Sample Information:**

Sample Name. . . . . : FILTERING HALF MASK  
Sample Specification. . . . : BT-005  
Sample Classification. . . . : FFP2  
Sample Description. . . . . : Samples in good condition  
Sampled Method. . . . . : All parts were received from customer  
Receipt Date. . . . . : 2020-05-15

**Testing Information:**

Test Items. . . . . : Leakage, Penetration of filter material, etc.  
Test Reference. . . . . : EN 149: 2001+A1: 2009  
Test Result. . . . . : Please refer to the following pages  
Test Conclusion. . . . . : The test completed project meets EN149: 2001 + A1: 2009  
standard FFP2 grade

Written by:

Arzi gm

Inspected by:

Shufeng wu

Approved by:

Steven Zhu

Date:

2020-05-31

Date:

2020-05-31

Date:

2020-05-31

**BEFITLAB TEST TECHNOLOGY SHANGHAI CO., LTD.****Member of International Standards Certification (ISC) Group**

# Test Report


Page 2 of 9

Report No.: BT20200625T

## 1、Sample List

Manufacturer	Sample Name	Specification	Material	Lot
SHANDONG JIANGPO SANITARY PRODUCTS CO.,LTD.	FILTERING HALF MASK	BT-005	/	/

## 2、Sample Photos

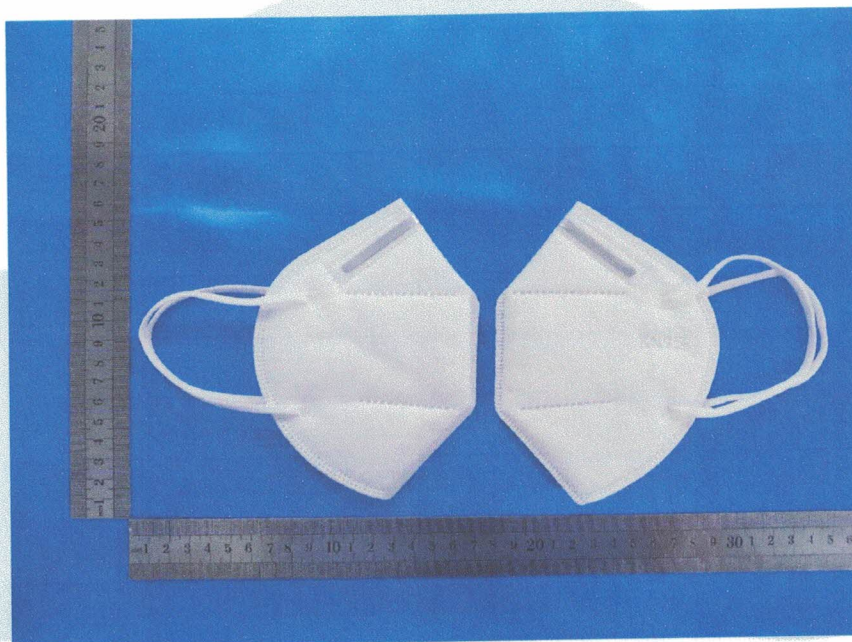



# Test Report

Page 3 of 9

Report No.: BT20200625T

**Appendix 1: Visual inspection**

**1.1. Visual inspection:** The visual inspection shall include the marking and information supplied by the manufacturer.

**1.2. Result:** Pass

**1.3. Note:** In accordance with requirement.

**Appendix 2: Package**

**2.1. Package:** Particle filtering half masks shall be offered for sale packaged in such a way that they are protected against mechanical damage and contamination before use.

**2.2. Result:** Pass

**2.3. Note:** In accordance with requirement.

**Appendix 3: Material**

**3.1. Material:** Materials used shall be suitable to withstand handling and wear over the period for which the particle filtering half mask is designed to be used. Any material from the filter media released by the air flow through the filter shall not constitute a hazard or nuisance for the wearer. After undergoing the conditioning described in 8.3.1 none of the particle filtering half masks shall have suffered mechanical failure of the facepiece or straps. When conditioned in accordance with 8.3.1 and 8.3.2 the particle filtering half mask shall not collapse.

**3.2. Result:** Pass

**3.3. Note:** No mechanical failure after undergoing the conditioning described in 8.3.1. No collapse when conditioned in accordance with 8.3.1 and 8.3.2.

**Appendix 4: Cleaning and disinfecting**

**4.1. Cleaning and disinfecting:** If the particle filtering half mask is designed to be re-usable, the materials used shall withstand the cleaning and disinfecting agents and procedures to be specified by the manufacturer.

**4.2. Result:** N/A

**4.3. Note:** Single shift use only.

**Appendix 5: Practical performance**

**5.1. Practical performance:** The particle filtering half mask shall undergo practical performance tests under realistic conditions.

**5.2. Result:** Pass



**5.3. Note:** No imperfections.**Appendix 6: Finish of parts****6.1. Finish of parts:** Parts of the device likely to come into contact with the wearer shall have no sharp edges or burrs.**6.2. Result:** Pass**6.3. Note:** No sharp edges or burrs.**Appendix 7: Total inward leakage****7.1. Total inward leakage:** For particle filtering half masks fitted in accordance with the manufacturer's information, at least 46 out of the 50 individual exercise results (i.e. 10 subjects x 5 exercises) for total inward leakage shall be not greater than: 25% for FFP1, 11% for FFP2, 5% for FFP3 and, in addition, at least 8 out of the 10 individual wearer arithmetic means for the total inward leakage shall be not greater than 22% for FFP1, 8% for FFP2, 2% for FFP3**7.2. Result:** Pass**7.3. Note:**

Subject	Sample No.	Condition	Walk (%)	Head Side/side (%)	Head up/down (%)	Talk (%)	Walk (%)	Mean (%)
Li	1	A.R.	5.93	5.93	8.38	7.06	8.84	7.23
Zhang	2	A.R.	7.96	5.93	5.65	6.14	8.95	6.93
Yang	3	A.R.	5.66	6.70	7.35	6.49	7.36	6.71
Liu	4	A.R.	7.63	8.86	7.75	5.76	6.90	7.38
Xu	5	A.R.	5.87	8.33	7.54	6.23	8.04	7.20
Sun	6	T.C.	6.69	7.12	6.37	8.55	8.18	7.38
Shen	7	T.C.	5.53	6.00	6.11	6.80	8.63	6.61
Zhu	8	T.C.	6.82	5.61	8.46	8.82	6.20	7.18
Wu	9	T.C.	8.53	6.48	5.78	8.66	6.13	7.12
Xie	10	T.C.	5.55	6.79	6.61	5.90	6.49	6.27
50 out of the 50 individual exercise results $\leq 11\%$ 10 of the 10 individual arithmetic means $\leq 8\%$					Pass			

# Test Report

Page 5 of 9

Report No.: BT20200625T

Subject	Face length	Face Width	Face Depth	Mouth Width
Li	128	133	109	48
Zhang	115	146	113	55
Yang	109	126	109	51
Liu	108	120	113	51
Xu	114	135	113	54
Sun	126	153	119	56
Shen	112	138	121	59
Zhu	119	146	120	53
Wu	123	150	115	53
Xie	119	141	118	58

## Appendix 8: Penetration of filter material

**8.1. Penetration of filter material:** The penetration of the filter of the particle filtering half mask shall meet the requirements of Table 1.

Sodium chloride test 95 l/min

Paraffin oil test 95 l/min

FFP1 ≤20%  
 FFP2 ≤6%  
 FFP3 ≤1%

≤20%  
 ≤6%  
 ≤1%

**8.2.Result:** Pass

**8.3. Note:**

Aerosol	Condition	Sample No.	Penetration (%)	Assessment
Sodium chloride test	As received	11	1.0	
		12	0.1	
		13	1.0	
	Simulated wearing treatment	14	1.6	
		15	0.7	
		16	1.2	
	Mechanical strength+ Temperature conditioned	17	1.6	
		18	3.4	
		19	1.9	

**BEFITLAB TEST TECHNOLOGY SHANGHAI CO., LTD.**

No. 230, ALLEY 2999, BAOAN ROAD, JIADING DISTRICT SHANGHAI 201801, PEOPLE'S REPUBLIC OF CHINA

Email: [info@befitlab.com](mailto:info@befitlab.com)



# Test Report

Page 6 of 9

Report No.: BT20200625T

Report No.: B120200025				
Paraffin oil test	As received	20	0.4	
		21	0.7	
		22	0.4	
	Simulated wearing treatment	23	1.2	
		24	0.3	
		25	1.7	
	Mechanical strength+ Temperature conditioned	26	2.1	
		27	5.9	
		28	1.1	
Flow conditioning: Single filter: 95.0 L/min				

## Appendix 9: Compatibility with skin

**9.1. Compatibility with skin:** Materials that may come into contact with the wearer's skin shall not be known to be likely to cause irritation or any other adverse effect to health.

**9.2. Result:** Pass

**9.3. Note:** No irritation or any other adverse effect to health.

## Appendix 10: Flammability

**10.1. Flammability:** When tested, the particle filtering half mask shall not burn or not to continue to burn for more than 5 s after removal from the flame.

**10.2. Result:** Pass

**10.3. Note:**

Condition	Sample No.	Result	Assessment
As received	29	Burn for 0s	Pass
	30	Burn for 0s	
Temperature conditioned	31	Burn for 0s	
	32	Burn for 0s	

## Appendix 11: Carbon dioxide content of the inhalation air

**11.1. Carbon dioxide content of the inhalation air:** The carbon dioxide content of the inhalation air (dead space) shall not exceed an average of 1,0 % (by volume)



**11.2. Result:** Pass**11.3. Note:**

Condition	Sample No.	Result		Assessment
As received	33	0.28%	Mean value 0.27 %	Pass
	34	0.27%		
	35	0.26%		

**Appendix 12: Head harness**

**12.1. Head harness:** The head harness shall be designed so that the particle filtering half mask can be donned and removed easily. The head harness shall be adjustable or self-adjusting and shall be sufficiently robust to hold the particle filtering half mask firmly in position and be capable of maintaining total inward leakage requirements for the device.

**12.2. Result:** Pass

**12.3. Note:** Head harness can be donned and removed easily, adjustable or self-adjusting and have sufficiently robust to hold the particle filtering half mask firmly.

**Appendix 13: Field of vision**

**13.1. Field of vision:** The field of vision is acceptable if determined so in practical performance tests.

**13.2. Result:** Pass

**13.3. Note:** Pass the practical performance tests.

**Appendix 14: Exhalation valve**

**14.1. Exhalation valve:** A particle filtering half mask may have one or more exhalation valve(s), which shall function correctly in all orientations. If an exhalation valve is provided it shall be protected against or be resistant to dirt and mechanical damage and may be shrouded or may include any other device that may be necessary for the particle filtering half mask to comply with 7.9. Exhalation valve(s), if fitted, shall continue to operate correctly after a continuous exhalation flow of 300 l/min over a period of 30 s. When the exhalation valve housing is attached to the faceblank, it shall withstand axially a tensile force of 10 N applied for 10 s.

**14.2. Result:** N/A

**14.3. Note:** No exhalation valve.



# Test Report

Report No.: BT20200625T

Page 8 of 9

## Appendix 15: Breathing resistance

**15.1. Breathing resistance:** The breathing resistance apply to valved and valveless particle filtering half masks and shall meet the requirements of Table 2.

Classification	Maximum permitted resistance (mbar)		
	Inhalation		Exhalation
	30 l/min	95 l/min	160 l/min
FFP1	0.6	2.1	3.0
FFP2	0.7	2.4	3.0
FFP3	1.0	3.0	3.0

**15.2. Result:** Pass

**15.3. Note:**

As received	Flow rate		36					37					38				
			A	B	C	D	E	A	B	C	D	E	A	B	C	D	E
	Inhalation	30 l/min	0.3	0.3	0.2	0.2	0.3	0.3	0.3	0.3	0.3	0.3	0.4	0.4	0.3	0.4	0.3
		95 l/min	1.3	1.4	1.3	1.3	1.4	1.4	1.5	1.4	1.4	1.5	1.2	1.3	1.3	1.3	1.2
	Exhalation	160 l/min	2.7	2.6	2.5	2.7	2.7	2.8	2.9	2.7	2.7	2.8	2.8	2.7	2.6	2.6	2.7
Simulated wearing treatment	Flow rate		39					40					41				
			A	B	C	D	E	A	B	C	D	E	A	B	C	D	E
	Inhalation	30 l/min	0.3	0.3	0.2	0.2	0.2	0.3	0.3	0.3	0.3	0.3	0.3	0.2	0.3	0.2	0.2
		95 l/min	1.4	1.5	1.4	1.5	1.5	1.5	1.5	1.4	1.5	1.5	1.3	1.4	1.4	1.3	1.3
	Exhalation	160 l/min	2.8	2.8	2.6	2.7	2.8	2.7	2.7	2.6	2.5	2.6	2.9	2.9	2.7	2.8	2.7
Temperature conditioned	Flow rate		42					43					44				
			A	B	C	D	E	A	B	C	D	E	A	B	C	D	E
	Inhalation	30 l/min	0.3	0.3	0.3	0.2	0.2	0.3	0.3	0.3	0.2	0.2	0.3	0.3	0.2	0.2	0.3
		95 l/min	1.4	1.4	1.3	1.3	1.4	1.5	1.5	1.5	1.4	1.4	1.4	1.4	1.3	1.3	1.4
	Exhalation	160 l/min	2.7	2.6	2.6	2.7	2.6	2.8	2.6	2.6	2.8	2.8	2.7	2.8	2.6	2.7	2.8
Assessment	Pass																

A: facing directly ahead; B: facing vertically upwards; C: facing vertically downwards; D: lying on the left side; E: lying on the right side

## Appendix 16: Clogging

**16.1. Clogging:** For single shift use devices, the clogging test is an optional test. For re-usable devices the test is mandatory.

**16.1.1 Breathing resistance:** Valved particle filtering half masks:  
After clogging the inhalation resistances shall not exceed:



# Test Report

Page 9 of 9

Report No.: BT20200625T

FFP1: 4 mbar, FFP2: 5 mbar, FFP3: 7 mbar at 95L/min continuous flow

The exhalation resistance shall not exceed 3 mbar at 160 L/min continuous flow

Valveless particle filtering half masks

After clogging the inhalation and exhalation resistances shall not exceed:

FFP1: 3 mbar, FFP2: 4 mbar, FFP3: 5 mbar at 95L/min continuous flow

**16.1.2 Penetration of filter material:** The penetration of the filter of the particle filtering half mask shall meet the requirements of Table 1.

	Sodium chloride test 95 l/min	Paraffin oil test 95 l/min
FFP1	≤20%	≤20%
FFP2	≤6%	≤6%
FFP3	≤1%	≤1%

**16.2. Result:** N/A**16.3. Note:** Single shift use only.**Appendix 17: Demountable parts****17.1. Demountable parts:** All demountable parts (if fitted) shall be readily connected and secured, where possible by hand**17.2. Result:** N/A**17.3. Note:** No demountable parts.

\*\*\*\*\* End \*\*\*\*\*

**Notice Items:**

1. It is not valid if the report without our stamp.
2. This report must not be altered, increased or deleted.
3. The report is just responsible for the tested sample.
4. The sample(s) information was/were submitted and identified on behalf of the client.
5. Any questions on the report should be put forward within fifteen days since the date on which you receive the report, and overdue is inadmissible.
6. The report must not be partially duplicated except in full, without prior written approval of the company.
7. If any problem, please Call: 021-59100859 or Email: [info@befitlab.com](mailto:info@befitlab.com)
8. Company website: [www.accreditservice.com](http://www.accreditservice.com)